

BVF 701

programmable room thermostat



SPECIFICATION

Operating voltage:	230V AC, 50/60 Hz
Capacity:	3600W/16A
Standby consumption:	0.5W
Display:	LCD White backlight
External Sensor:	NTC 10kΩ @ 25°C
IP protection rating:	IP 30
Housing:	White ABS to UL94-5 fire standard
Temperature settings:	5°C–80°C, 0.5°C
Accuracy:	± 0.5°C
PRG options:	5+1+1, four cycles each day
Housing dimensions:	86 mm × 88 mm × 18 mm
Relay inst. dimensions:	Ø 65 mm diameter, standard




Day Indicator

Period Icons

Comfort Mode

Energy-saving Mode

PRG Mode

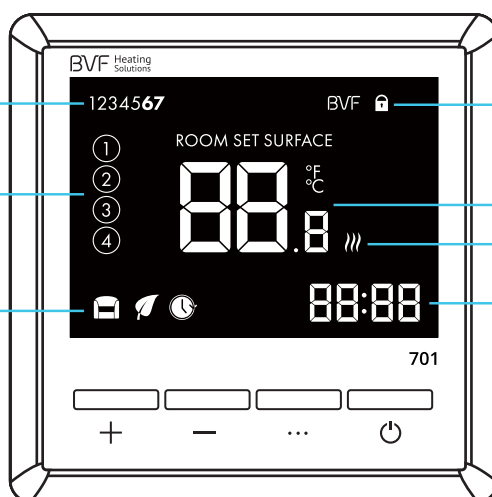

Key lock on

Temp. display

Heating icon

Clock

+ Increase temperature

- Decrease temperature

... Modes & Parameter

Power On/Off

SETTING COMFORT MODE AND ENERGY-SAVING MODE

Switch between modes using the ... button.

1. Choosing the Comfort Mode  you may assign temperature using — or + buttons.2. Choosing the Energy-saving Mode  you may assign temperature using — or + buttons.

CLOCK & 5+1+1 PRG SETTING

PRG function allows you to set different temperatures throughout the day. For example, you may want the home warm in the morning, cooler when you leave your home for the day, and then warmer in the evening when you return home. The thermostat offers 5+1+1 programming option, four different temperature levels for each day. Default comfort levels are pre-programmed; still you can change them easily with the following method:

Long press ... button for 5 seconds,

1. press — and + to adjust the clock (min-hour-weekday), each press of ... will go into next time setting
2. after clock adjustment, press ... to 5+1+1 mode setting. By pressing — and + you can set the desired time and temperature of each period. (Weekday-period-time-temp.) Each press ... of button will go into next item setting.

DEFAULT VALUES

Period	Wake up ①		Leave Home ②		Return Home ③		Sleep ④	
	Time	Temp.	Time	Temp.	Time	Temp.	Time	Temp.
1-5 (Mon.-Fri.)	7:00	22°C	8:30	19°C	17:00	22°C	22:00	19°C
6 (Sat.)	8:00	22°C	8:30	22°C	17:00	22°C	22:00	19°C
7 (Sun.)	8:00	22°C	8:30	22°C	17:00	22°C	22:00	19°C

KEY-LOCK FUNCTION

In order to avoid unauthorised access (hotels, public areas, child room) you can activate the key lock function from parameter settings page 12. To unlock your device long press the — and + buttons for ~5 seconds.

PARAMETER SETTINGS

Under power off mode, to access or modify parameter settings, please long press ... and + buttons simultaneously for ~8 seconds until the MENU appear showing 01 which is menu 1. Each press of the ... button will go to the next MENU.

Menu	Description	Range	Default
01	Temp. Offset	-8°C ~ 8°C	0
02	Set Point Max.	5°C ~ 80°C	35°C
03	Set Point Min.	5°C ~ 80°C	5°C
04	Sensor Select	ROOM SURFACE Room + Surface	
05	Frost Protection Temp.	5°C ~ 15°C	5°C
06	Surface Temp. Display	Read Only	
07	High Temp. Protection	20°C ~ 80°C	32°C
08	Comfort Mode Floor Limit Temp. Set	5°C ~ 35°C	29°C
09	Energy-saving Mode Floor Limit Temp. Set	5°C ~ 35°C	27°C
10	PRG Mode Floor Limit Temp. Set	5°C ~ 35°C	29°C
11	Reset	rE (Yes)	
12	Key lock	0 - off, 1 - on	0
14	OWD function ON/OFF select	0 - off, 1 - on	0
15	OWD Detect Time Select	2 ~ 30 mins	15 mins
16	OWD Drop temp. select (within detect time)	2 / 3 / 4°C	2°C
17	OWD Delay time select (Return to previous working status)	10 ~ 60 mins	30 mins
18	The temp. diff to exit high protection mode	1°C ~ 3°C	1°C
19	External sensor temp. offset	-8°C ~ 8°C	0
20	Energy optimisation	1: electric radiator 2: heating panel 3: ceiling heating 4: floor heating	2
21	Brightness (Standby Mode)	0 - 100%	5%
22	Software version		

WIRING DIAGRAM